



OTEB-CO-B EDFA WITHOUT SNMP INSTRUCTION MANUAL



Phone: (209) 586-1022
(800) 545-1022

Fax: (209) 586-1026

E-Mail: salessupport@olsontech.com
www.olsontech.com



SAFETY WARNINGS

LASER RADIATION



The OTEA-CO-B EDFA emits invisible radiation that can cause permanent eye damage. **AVOID DIRECT EXPOSURE TO BEAM.** Operate the EDFA only with the proper optical fiber installed in the optical connector. Power to the OTEA-CO-B EDFA should be turned off or preferably, disconnected whenever the optical connector cover is opened and there is no installed fiber (as when the fiber connector is being installed or removed from the optical connector). When the amplifier is working in normal state, the output power of light with wavelengths in the invisible range (infrared light) may exceed +26dBm (400mW). Therefore, to avoid damaging your eyes, do not look into the output port of the EDFA directly.

NEVER look at the end of the fiber to see if light is coming out. **NEVER!** Most fiber optic laser wavelengths (1310nm and 1550nm) are totally invisible to the unaided eye and will cause permanent damage. Always use instruments, such as an optical power meter, to verify light output. Use extreme care with magnifying glasses, microscopes, etc.

NEVER look into the output of the EDFA or a fiber connected to an EDFA.

NEVER clean an optical connector with optical power present.

NEVER look into or use any optical instrument to view the distant end of a fiber that may be connected directly or via an optical splitter, to a transmitter or EDFA that may be operating. This specifically applies to fibers that are to be connected to receivers (such as the OTPN-2000C) or other devices at any distance from the laser transmitter or EDFA.

ALWAYS read the product data sheet and the laser safety label before powering the product. Note the operation wavelength, optical output power and safety classifications. If safety goggles or other eye protection are used, be certain that the protection is effective at the wavelength emitted by the device under test **BEFORE** applying power.

ALWAYS connect a fiber to the output of the device **BEFORE** power is applied. Power should never be applied without an attached fiber. If the device has a connector output, a connector should be attached that is connected to a fiber. This will ensure that all light is confined within the fiber waveguide, virtually eliminating all potential hazard.

HIGH VOLTAGE

The OTEA-CO-B EDFA contains no user serviceable parts. There is exposed high voltage inside this unit. Only authorized factory service technicians should open the unit with power applied.


SHOCK HAZARD

The OTEA-CO-B EDFA is designed for indoor use only. Direct exposure to moisture must be avoided. If you have questions about laser safety procedures, please call Olson Technology before powering your product. The fiber amplifier is sensitive equipment. Do not open the case of the amplifier to avoid damaging the internal component devices. Opening the case of the amplifier without the written permission of Olson Technology, Inc., will void the warranty.

INTRODUCTION

Olson Technology, Inc. provides a wide range of Erbium Doped Fiber Amplifiers (EDFA's), for 1550nm HFC networks that feature low noise figure, stable output power and excellent environmental stability. EDFA's are comprised of two main parts: the gain module and the external control system. The gain module amplifies the optical signal in 1550nm wavelength band (1540-1560nm typically). It is made of high quality optical components, and carefully designed to maximize overall performance. Low power EDFA's may only have a single pump, while high power units can have up to three pumps. The external control system allows the operator to ensure that the gain module is working optimally. Controlled by microprocessor, it monitors the states of the gain module and adjusts all the parameters to ensure a stabilized output power of the gain module. This system also provides warnings via the front panel indicator LED and a digital display. The LCD on the front panel shows the detailed working parameters of the EDFA. This information can also be accessed via the standard RS-232 interface via an external computer.

OPERATION PANEL DESCRIPTION

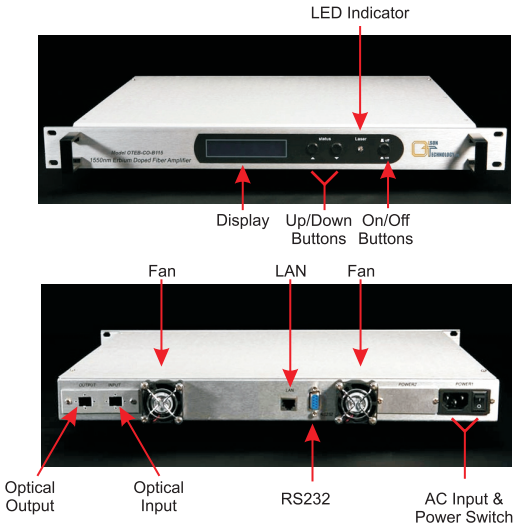

STATUS DISPLAY PANEL OPERATION

The microprocessor software monitors the function of a number of system parameters. Press the ▼ and ▲ buttons to display key working parameters sequentially.



Optical Input Power - Input power: INPUT = display input power (dBm)

- Input power = +10dBm => alarm
- Input power = -10dBm => display NO INPUT => shut down the power supply of the laser.
- Input power = 0dBm => reach fixed output power.

Optical Output Power - Output: OUTPUT = display output power (dBm)

- Tolerance = ± 0.2 dBm
- No input = power supply of the laser will be shut down automatically => display NO INPUT => NO OUTPUT

Laser Temperature - Laser temperature: TEMP = laser temp is set to operate in the range of 20-30°C

- if exceeded => LCD will display "READY" => red LED indicator will light, and the power supply of the laser will shut down automatically.

Laser Bias - Bias: BIAS = Bias is the key index of the laser, if it exceeds the fixed range power supply of the laser, the power supply will be shut down automatically to protect the laser.

Laser Heating/Cooling - Cooling/heating: COOLING/HEATING = standard temperature for laser 25°C

TEC - Thermoelectric cooler 25°C

- At high ambient temperatures, the LCD will display => COOLING
- At low ambient temperatures, the LCD will display => HEATING

Voltage

+5V Voltage: +5V READS... => ± 0.5 V alarm

-5V Voltage: -5V READS... => ± 0.5 V alarm

Serial Number - Displays the serial number of the EDFA.

IP Address for RS-232 Connector - The IP address code can be set by the operator via the RS-232 connector on the rear panel.

DESCRIPTION OF STATUS ALARM

The front panel indicator LED indicator may be red, green, or off. When the LED is green the EDFA is operating properly. When the LED is off, the unit is off. A red LED indicates an alarm condition. The alarm condition will be displayed on the display panel.

With proper power supply, if the EDFA is functioning normally and the LED indicator is red, the digital panel will display "READY KEY OFF. Turn on with the key. The display shows KEY OFF for 10 seconds, then the LED indicator changes to green.

Pressing the STATUS button displays the following parameters:

- Input power ≤ -10 dBm, display \Rightarrow NO INPUT; the EDFA cannot be turned on and the LED is red.
- If any fault listed above has occurred, there will be an alarm. The microprocessor will shut down the laser automatically, and the digital panel will display the cause of the fault.
- In order to protect the laser, there is a time-delay function. After turning the laser on with the key, the laser will start to work after 10 seconds.


NOTES ON OPERATION

The EDFA should have good grounding and grounding resistance to 4Ω . According to the international standard, on an AC three-wire plug, the middle wire is the grounding wire.


The EDFA incorporates a high performance, high reliability, switching power supply with over-voltage protection. The microprocessor monitors the output DC voltage. If the fuse blows, the unit should be returned to Olson for service.

In order to keep the reflection loss to <-55 dB, the EDFA uses SC/APC optical connectors. Other connector types, such as FC/PC, cannot be used with the EDFA. Keep the connector clean when installing the optical cables. Clean it with lint-free tissue with anhydrous alcohol after several rounds of connection/disconnection from the unit. NEVER clean the optical connectors with the unit powered!

EDFA BLOCK DIAGRAM

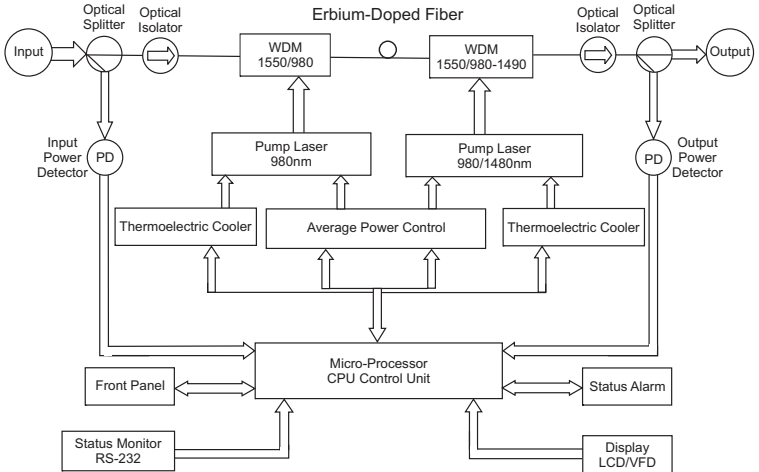

Typical Catv CNR Degradation

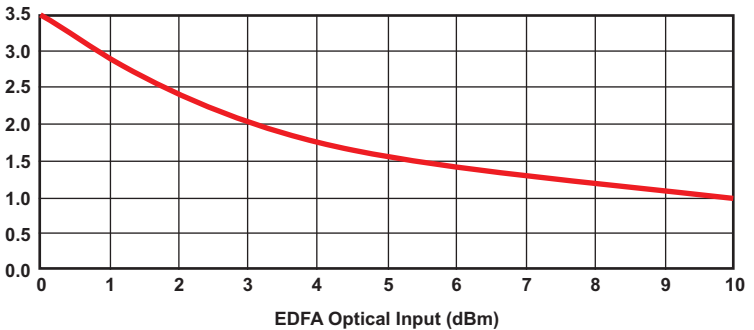

MODELS AND OUTPUTS

Typical Models	115	116	117	118	119	120	121	122	123	124	221	419
# of Outputs	1	1	1	1	1	1	1	1	1	1	2	4
Output Power (dBm)	15	16	17	18	19	20	21	22	23	24	21	19

SPECIFICATIONS

Optical Characteristics (with SM 9/125 μ m Fiber)

	Min	Typ	Max	Units
Operating Wavelength	1540		1560	nm
Input Power Range	-10		+10	dBm
Max. Alarm		10		dBm
Min. Alarm		-10		dBm
Output Stability	-0.3		+0.3	dB
Noise Figure (0dBm In)	≤ 4.5	≤ 5.0	≤ 5.3	dB
Noise Figure (6dBm In)	≤ 5.5	≤ 6.0	≤ 6.5	dB
Polarization		0.2		dB
PMD		0.5		ps
Reflection Loss	40			dB
Optical Connector	SC/APC			
Network Interface	RS-232/RJ45			

NOTES:

1) Non-condensing.

Electrical & Environmental Characteristics

	Min	Typ	Max	Units
Operating Temp. Range	+5		+45	$^{\circ}$ C
Storage Temp. Range	0		+55	$^{\circ}$ C
Relative Humidity ₁	10		90	%
P. S. Voltage	+85		+264	V _{AC}
P. S. Voltage		-48		V _{DC}
Power Consumption			50	W

[BLANK PAGE]